

manual transfer switch
120/240 while running generator
120VAC while inverting
will charge batteries while gen is
running.

