



QUESTO PRODOTTO CONTIENE UNA SORGENTE LUMINOSA DI CLASSE DI EFFICIENZA ENERGETICA "D"
THIS PRODUCT CONTAINS A LIGHTING SOURCE OF ENERGY EFFICIENCY CLASS "D"

LA SICUREZZA DI QUESTO APPARECCHIO È GARANTITA SOLO CON L'USO APPROPRIATO DI QUESTE ISTRUZIONI, PERTANTO È NECESSARIO CONSERVARLE
THE SAFETY AND RELIABILITY ARE GUARANTEED ONLY WHEN INSTALLATION INSTRUCTIONS ARE PROPERLY FOLLOWED. PLEASE KEEP THIS INSTRUCTION SHEET FOR FUTURE REFERENCE.

1 Safety warning: Turn off the power at the main switch.

2 Remove the top cover by pulling it upwards. **CLICK!!!**

3 Turn the top cover counter-clockwise to remove it.

4 The top cover is fully removed.

5 Insert the LED module into the base. **CLICK!!!**

6 Drill pilot holes in the ceiling for the mounting screws.

7 Use a power drill to tighten the screws into the ceiling.

8 Use a hammer to drive the mounting pins into the ceiling.

9 Tighten the screws on the mounting plate.

10 Connect the wiring. **EASY CONNECT PREMI E RILASCIA PUSH AND RELEASE**. Legend: **N** (Neutral), **L** (Line), **D** (Dimmer), **B** (Motion sensor), **C** (Wiring terminals), **A** (Wiring diagram).

11 Insert the LED module into the base.

12 Attach the top cover. **A** **CLICK!!!** **B**

13 Turn the top cover clockwise to lock it. **A** **B**

14 The top cover is fully attached.

15 Final assembly check. **CLICK!!!**

16 Final safety and sensor settings. **A** Safety warning. **B** **sensore regolabile con adjustable sensor with LED-SENSOR-REMOTE non incluso / not included**. **C** **30"** **Sensore di movimento to 100% luce Dopo 30 secondi 20% luce Motion sensor 100% light After 30 seconds 20% light**. Legend: **off** (sun icon), **on** (moon icon).