

Electronic Cigarettes

CARTOMIZER MANUAL

Congratulations

You've just become the enlightened owner of a FIN electronic cigarette. Your FIN is rechargeable, refillable and built to be a trusted companion.



STEP 1: Remove rubber caps from the cartomizer.

STEP 2: Screw the cartomizer into the rechargeable battery.

STEP 3: Enjoy your FIN.

FAQs How long does each cartomizer stay fresh? Each cartomizer stays fresh for approximately

1 year.

How does FIN work?

FIN electronic cigarettes produce water vapor with a battery and a cartomizer containing water, flavoring and nicotine. Water vapor is created when you inhale FIN.

Where can / learn more?
If you'd like to know more about FIN, please

If you'd like to know more about FIN, please contact us at 855-693-4648.

How much nicotine is in each

cartomizer? FIN offers 2 flavors of cartomizers with 3

FIN offers 2 flavors of cartomizers with 3 levels of nicotine in each.
Tobacco - 0.8%, 1.6% or 2.4% by volume
Menthol - 0.8%, 1.6% or 2.4% by volume

Important Information

All FIN products are intended for adult smokers of legal smoking age. Products containing nicotine should NOT be used by those under the legal smoking age, pregnant or breast feeding women, those sensitive to nicotine or who have inherent health problems or are taking prescribed medicines. If in any doubt as to your suitability to use this product please consult your family doctor before use. Keep all contents and components away from children at all times. Small components could be a choking hazard. Nicotine is a drug and is highly addictive.

California Proposition 65

Warning: This product contains nicotine, a chemical known to the state of California to cause birth defects or other reproductive harm.

IMPORTANT WARNING

Do not attempt to add to or modify components of this kit with other liquids or products. FIN is not responsible for damages that result from modifying kit components.

Additional information can be found at www.FINcigs.com