

SANDERCOCK HARMSMA
PANEL DRAWINGS

DATE
June 3, 2022



FOR REVIEW

DRAWN BY
PA, TA


PANEL KEY





SL MID R

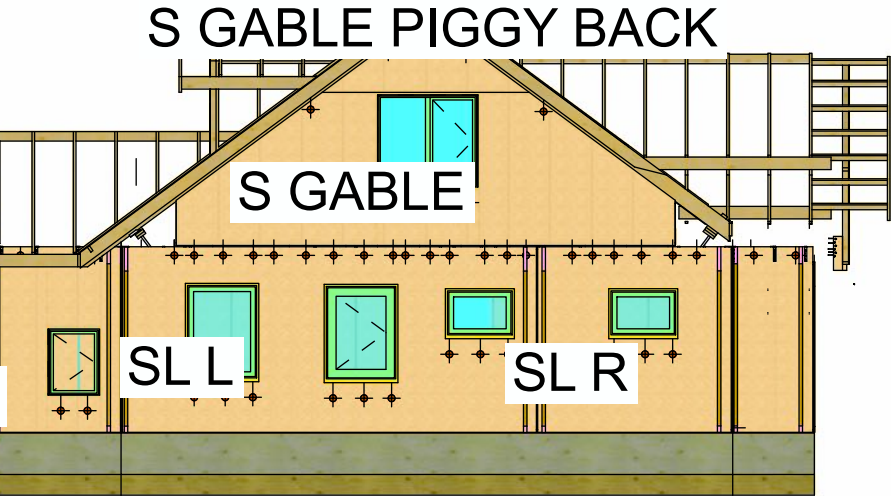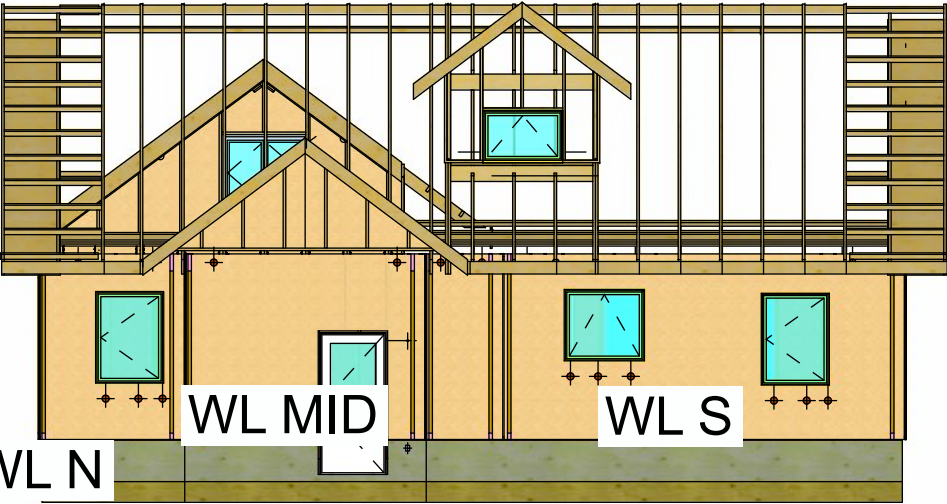

PAGE	ORDER	PANEL	LENGTH(FT)	HEIGHT (IN)
1		PANEL KEY		
2		EL SL	16.00	107.625
2		EL SR	8.33	107.625
3		EL N	17.25	98.75
4		WL S	23.25	107.625
5		WL N	7.10	107.625
5		WL MID	11.33	107.625
6		SL MID L	19.70	107.625
6		SL MID R	9.33	107.625
6		SL JOG	8.00	107.625
7		NL EL	20.00	107.625
7		NL ER	12.25	107.625
7		NL JOG	8.00	107.625
8		S GABLE	29.70	88.75
8		S GABLE PIGGY BACK		
9		N GABLE	29.70	88.75
9		N GABLE PIGGY BACK		
10		E GABLE	17.50	116
11		GABLE SHEATHING		
12		KOHLTECH WINDOW INSTALL DETAILS		

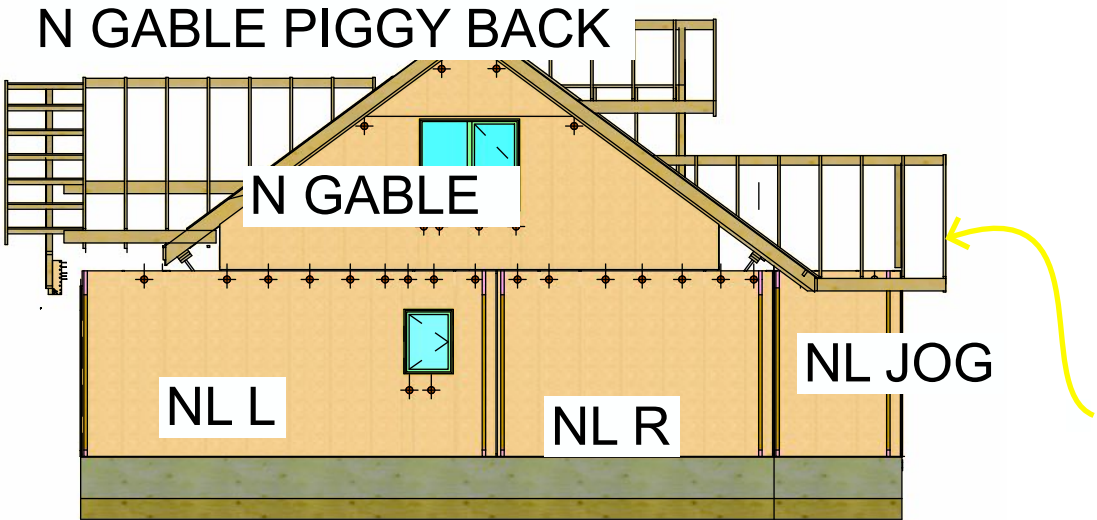


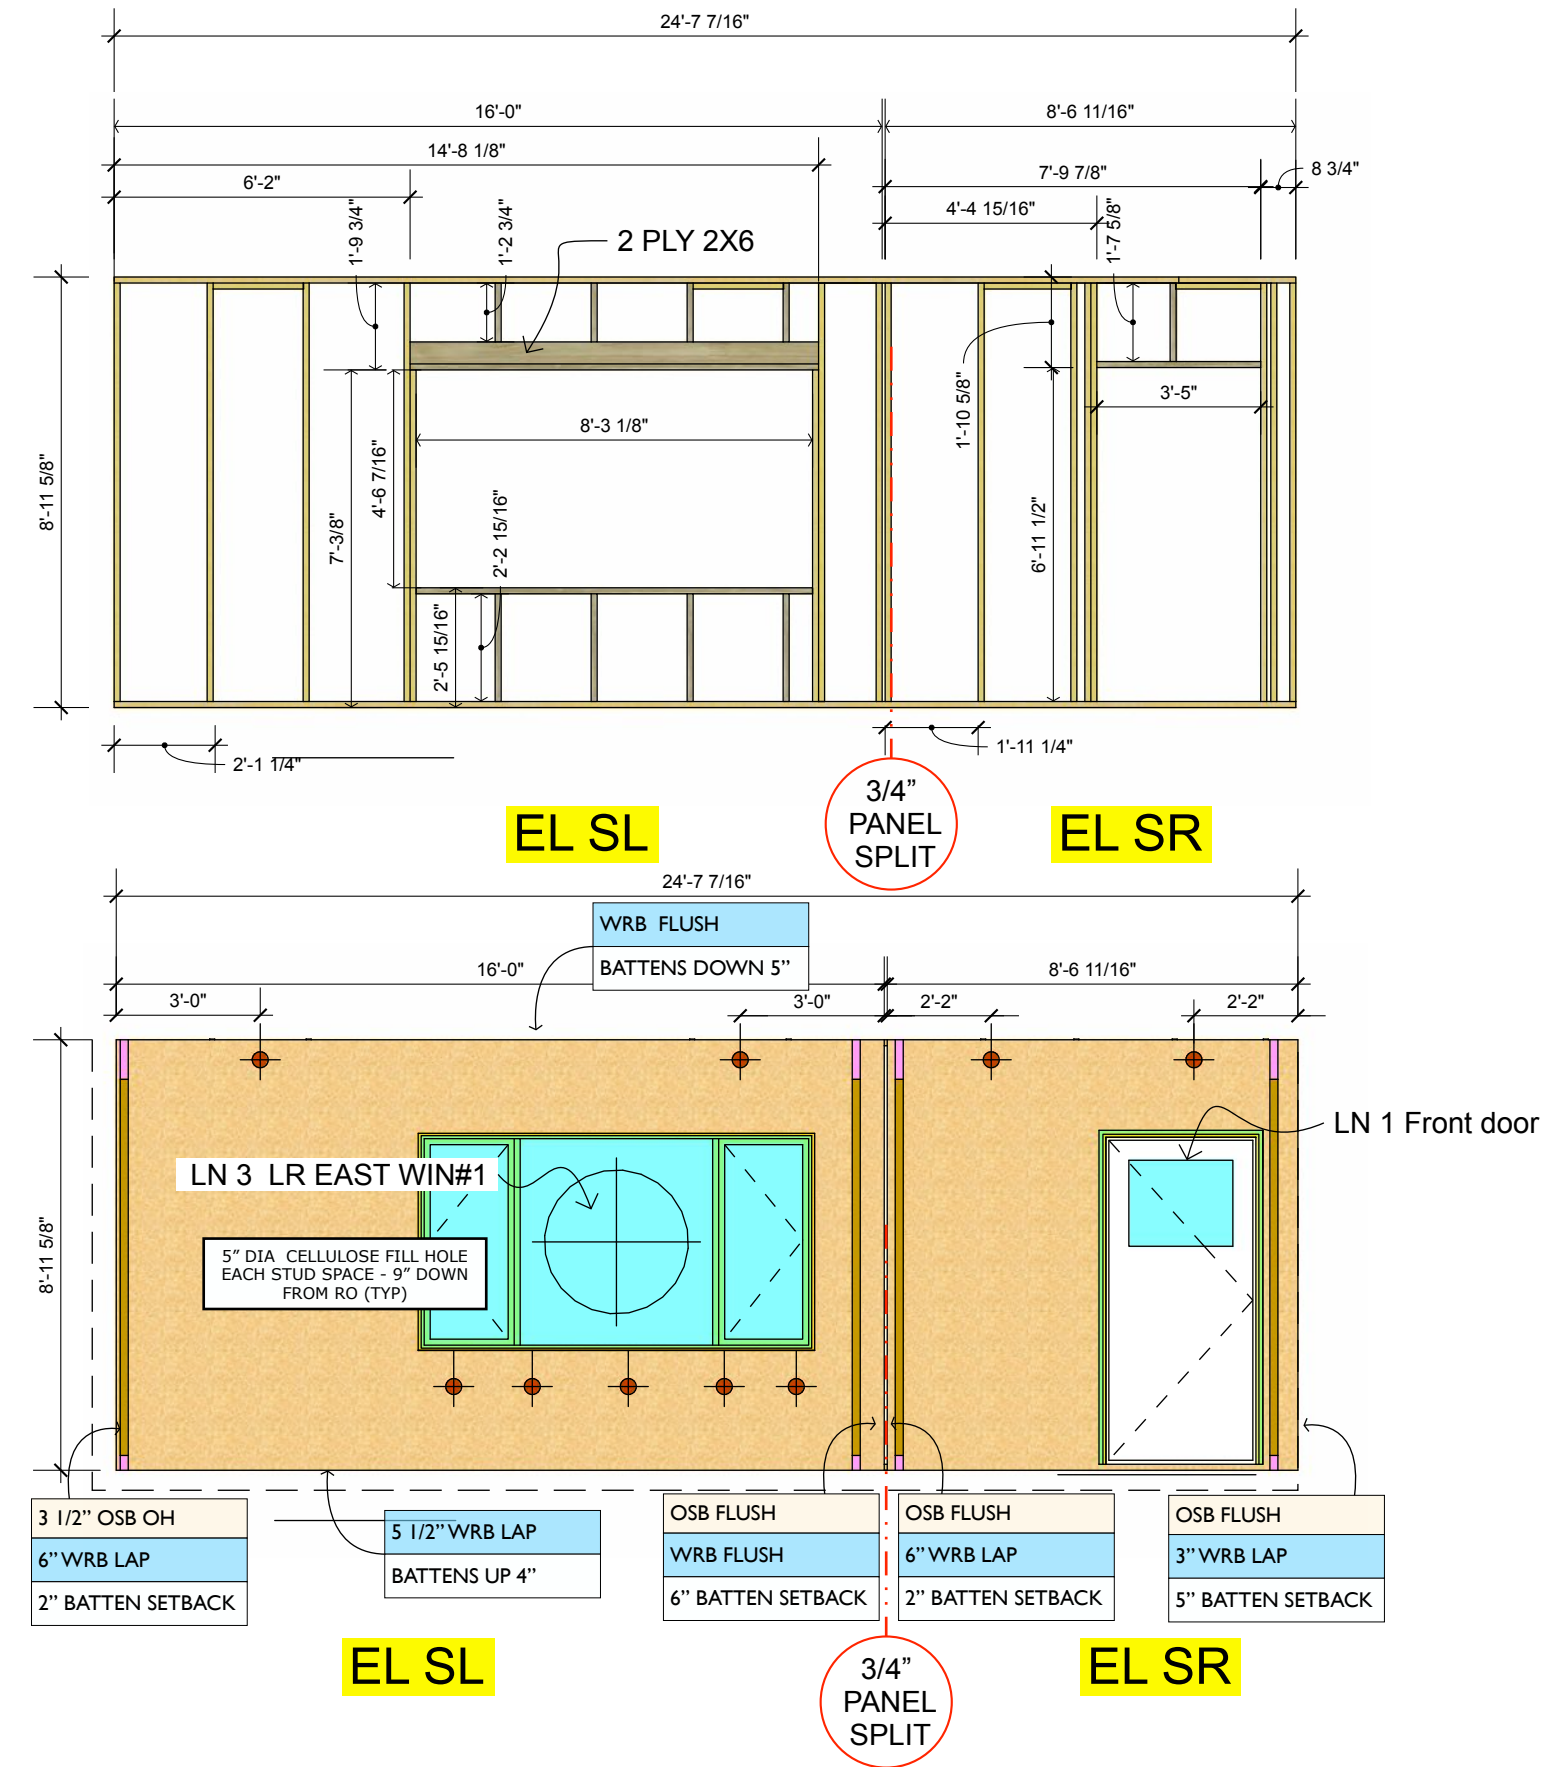

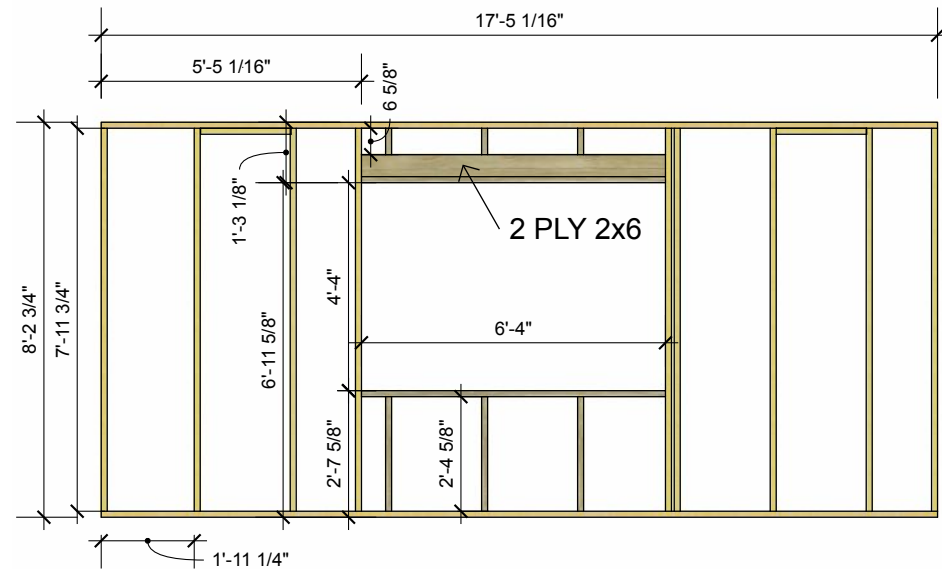

FRAME Scale: 1/4" = 1'-0"

- NOTES:
1. TOP AND BOTTOM PLATE TO BE LSL WHEN LENGTH EXCEEDS 14'
 2. FRAMING LUMBER TO BE #1&2 SPF OR EQUIVALENT
 3. STUDS SPACED @ 24" O.C. UNLESS OTHERWISE NOTED

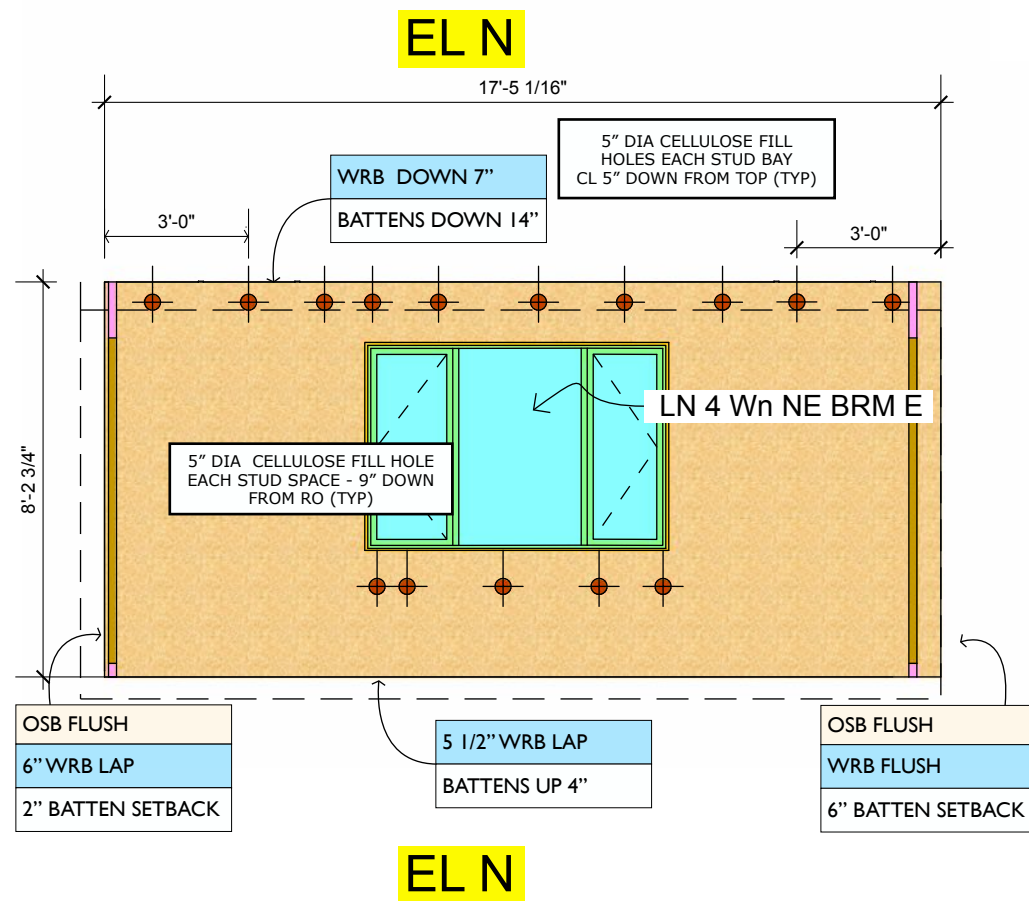


SHEATHING Scale: 1/4" = 1'-0"

- NOTES:
1. SHEATHING 7/16" OSB OR 1/2" SPRUCE PLYWOOD
 2. FLUSH SHEATHING ON ALL EDGES EXCEPT WHERE NOTED
 3. HORIZONTAL GAP BETWEEN SHEATHING SHEETS TO BE MIN 3/8" AND CAN BE UP TO 1 1/2"
 4. 5" DIA CELLULOSE FILL AND LIFT HOLES TO BE CENTRED 5' DOWN FROM TOP OF WALL AND 9" DOWN FROM RO SILL.

WRB AND RAINSCREEN BATTENS Scale: 1/4" = 1'-0"

- NOTES:
1. WRB TO BE SIGA MAJVEST SEALED PER 1.2 ON DETAIL SET
 2. BATTENS AS REQ'D FOR SIDING PER DETAIL SET
 3. DO NOT INSTALL BATTENS OVER LIFTING HOLES OR BLOWING HOLES
 4. DO NOT CUT WRB AT CELLULOSE FILL HOLES
 5. STAPLE WRB LAP ALLOWANCE TO EXPOSED BATTENS AFTER SIDING

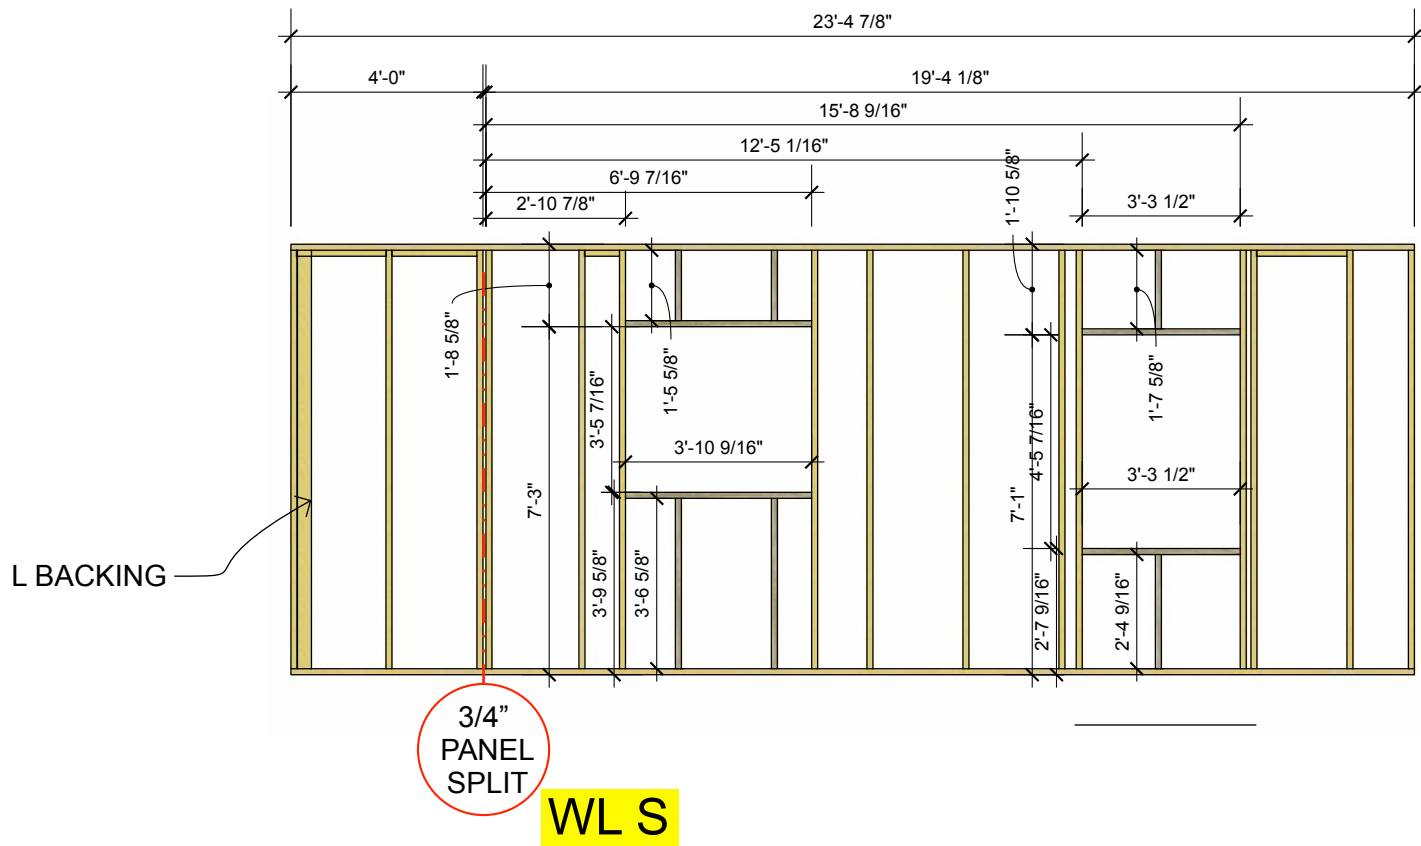


FRAME Scale: 1/4" = 1'-0"

- NOTES:
- 1. TOP AND BOTTOM PLATE TO BE LSL WHEN LENGTH EXCEEDS 14'
 - 2. FRAMING LUMBER TO BE #1&2 SPF OR EQUIVALENT
 - 3. STUDS SPACED @ 24" O.C. UNLESS OTHERWISE NOTED

SHEATHING Scale: 1/4" = 1'-0"

- NOTES:
- 1. SHEATHING 7/16" OSB OR 1/2" SPRUCE PLYWOOD
 - 2. FLUSH SHEATHING ON ALL EDGES EXCEPT WHERE NOTED
 - 3. HORIZONTAL GAP BETWEEN SHEATHING SHEETS TO BE MIN 3/8" AND CAN BE UP TO 1 1/2"
 - 4. 5" DIA CELLULOSE FILL AND LIFT HOLES TO BE CENTRED 5' DOWN FROM TOP OF WALL AND 9" DOWN FROM RO SILL.

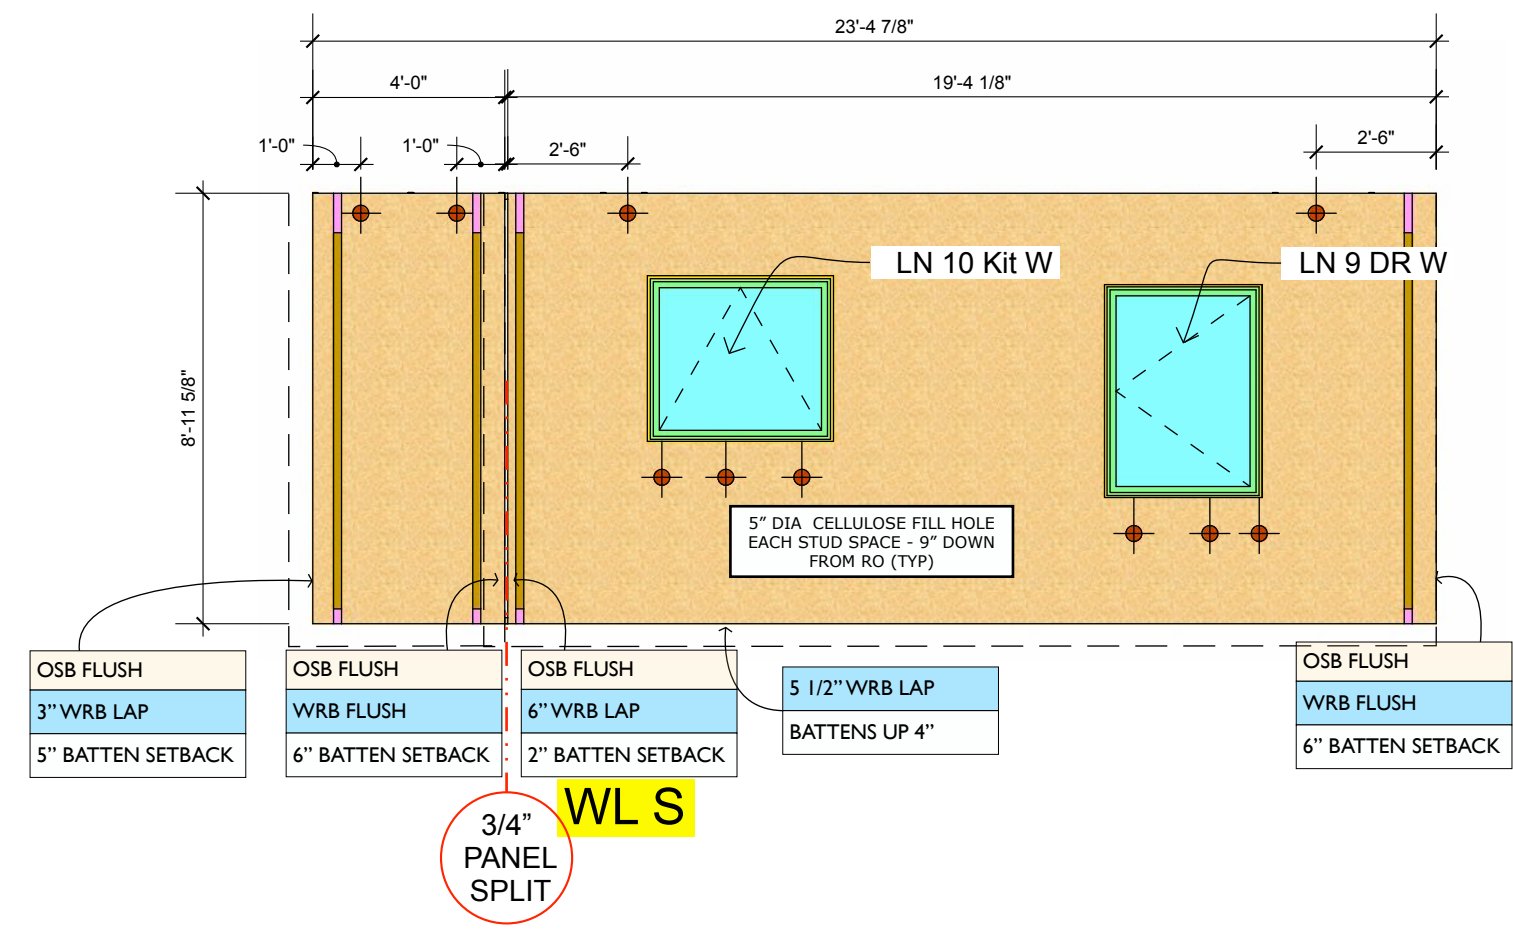

WRB AND RAINSCREEN BATTENS Scale: 1/4" = 1'-0"

- NOTES:
- 1. WRB TO BE SIGA MAJVEST SEALED PER 1.2 ON DETAIL SET
 - 2. BATTENS AS REQ'D FOR SIDING PER DETAIL SET
 - 3. DO NOT INSTALL BATTENS OVER LIFTING HOLES OR BLOWING HOLES
 - 4. DO NOT CUT WRB AT CELLULOSE FILL HOLES
 - 5. STAPLE WRB LAP ALLOWANCE TO EXPOSED BATTENS AFTER SIDING

SANDERCOCK HARMSMA
PANEL DRAWINGS

DATE
June 3, 2022

FOR REVIEW

DRAWN BY
PA, TA

WL S

BUTTERWICK CONSTRUCTION
& CARPENTRY LTD.
5628 82 Ave
Edmonton, AB T6B 3E6
Tel: 780.434.3559
www.butterwick.ca

SANDERCOCK/
HARMSMA
RETROFIT
11408 63 Street
Edmonton, AB
T5W 4G1

SANDERCOCK HARMSMA
PANEL DRAWINGS

DATE
June 3, 2022


FOR REVIEW

DRAWN BY
PA, TA


WL N & WL MID

FRAME Scale: 1/4" = 1'-0"

- NOTES:
1. TOP AND BOTTOM PLATE TO BE LSL WHEN LENGTH EXCEEDS 14'
 2. FRAMING LUMBER TO BE #1&2 SPF OR EQUIVALENT
 3. STUDS SPACED @ 24" O.C. UNLESS OTHERWISE NOTED

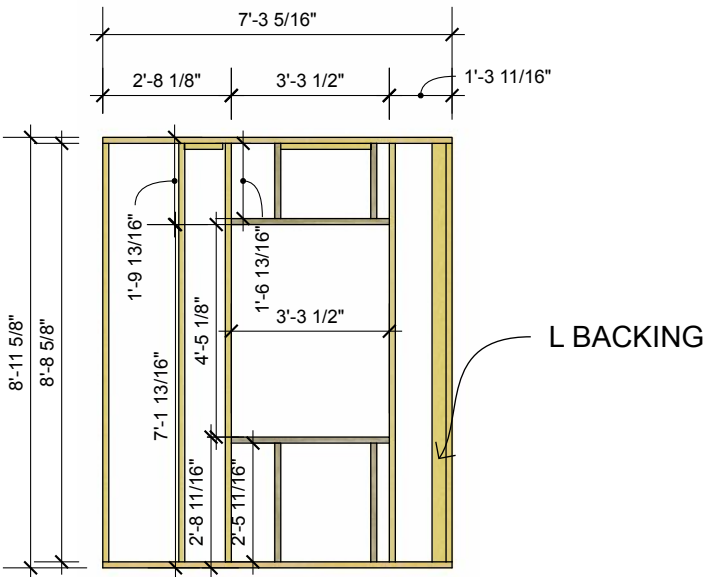


WL N

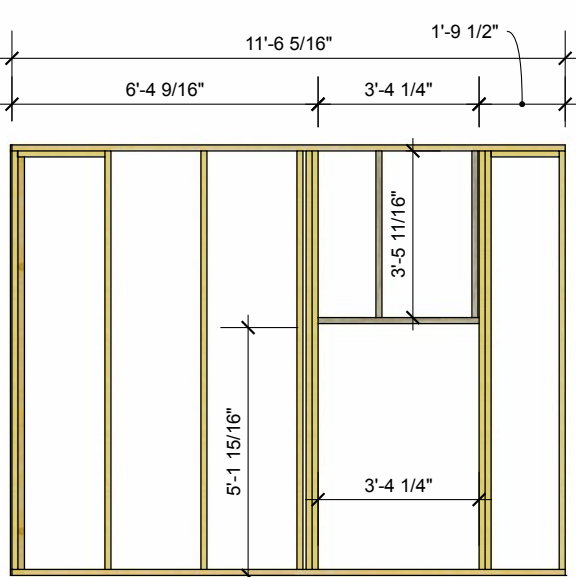


WL MID

SHEATHING Scale: 1/4" = 1'-0"

- NOTES:
1. SHEATHING 7/16" OSB OR 1/2" SPRUCE PLYWOOD
 2. FLUSH SHEATHING ON ALL EDGES EXCEPT WHERE NOTED
 3. HORIZONTAL GAP BETWEEN SHEATHING SHEETS TO BE MIN 3/8" AND CAN BE UP TO 1 1/2"
 4. 5" DIA CELLULOSE FILL AND LIFT HOLES TO BE CENTRED 5' DOWN FROM TOP OF WALL AND 9" DOWN FROM RO SILL.

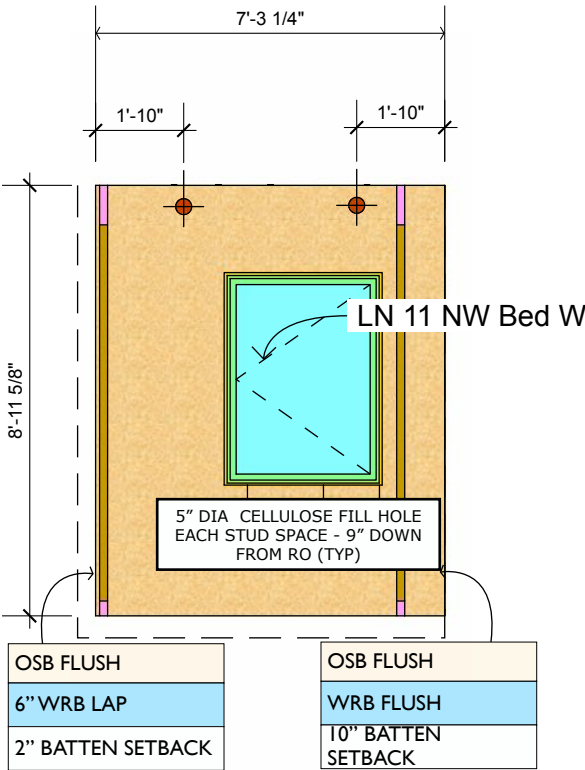



WL N

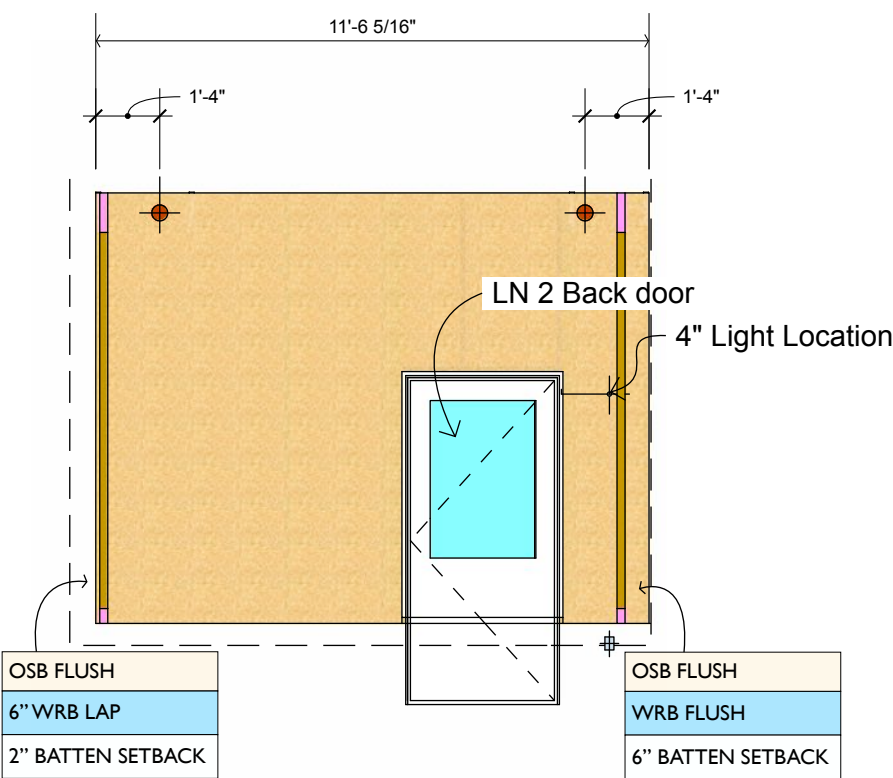


WL MID

WRB AND RAINSCREEN BATTENS Scale: 1/4" = 1'-0"


- NOTES:
1. WRB TO BE SIGA MAJVEST SEALED PER 1.2 ON DETAIL SET
 2. BATTENS AS REQ'D FOR SIDING PER DETAIL SET
 3. DO NOT INSTALL BATTENS OVER LIFTING HOLES OR BLOWING HOLES
 4. DO NOT CUT WRB AT CELLULOSE FILL HOLES
 5. STAPLE WRB LAP ALLOWANCE TO EXPOSED BATTENS AFTER SIDING

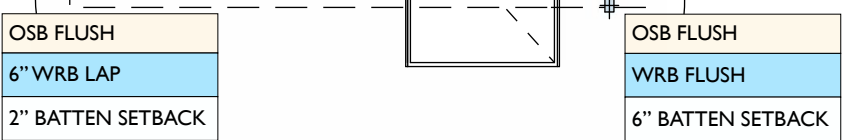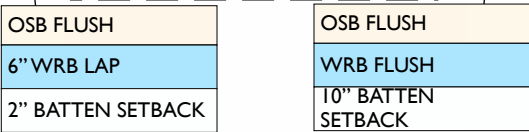

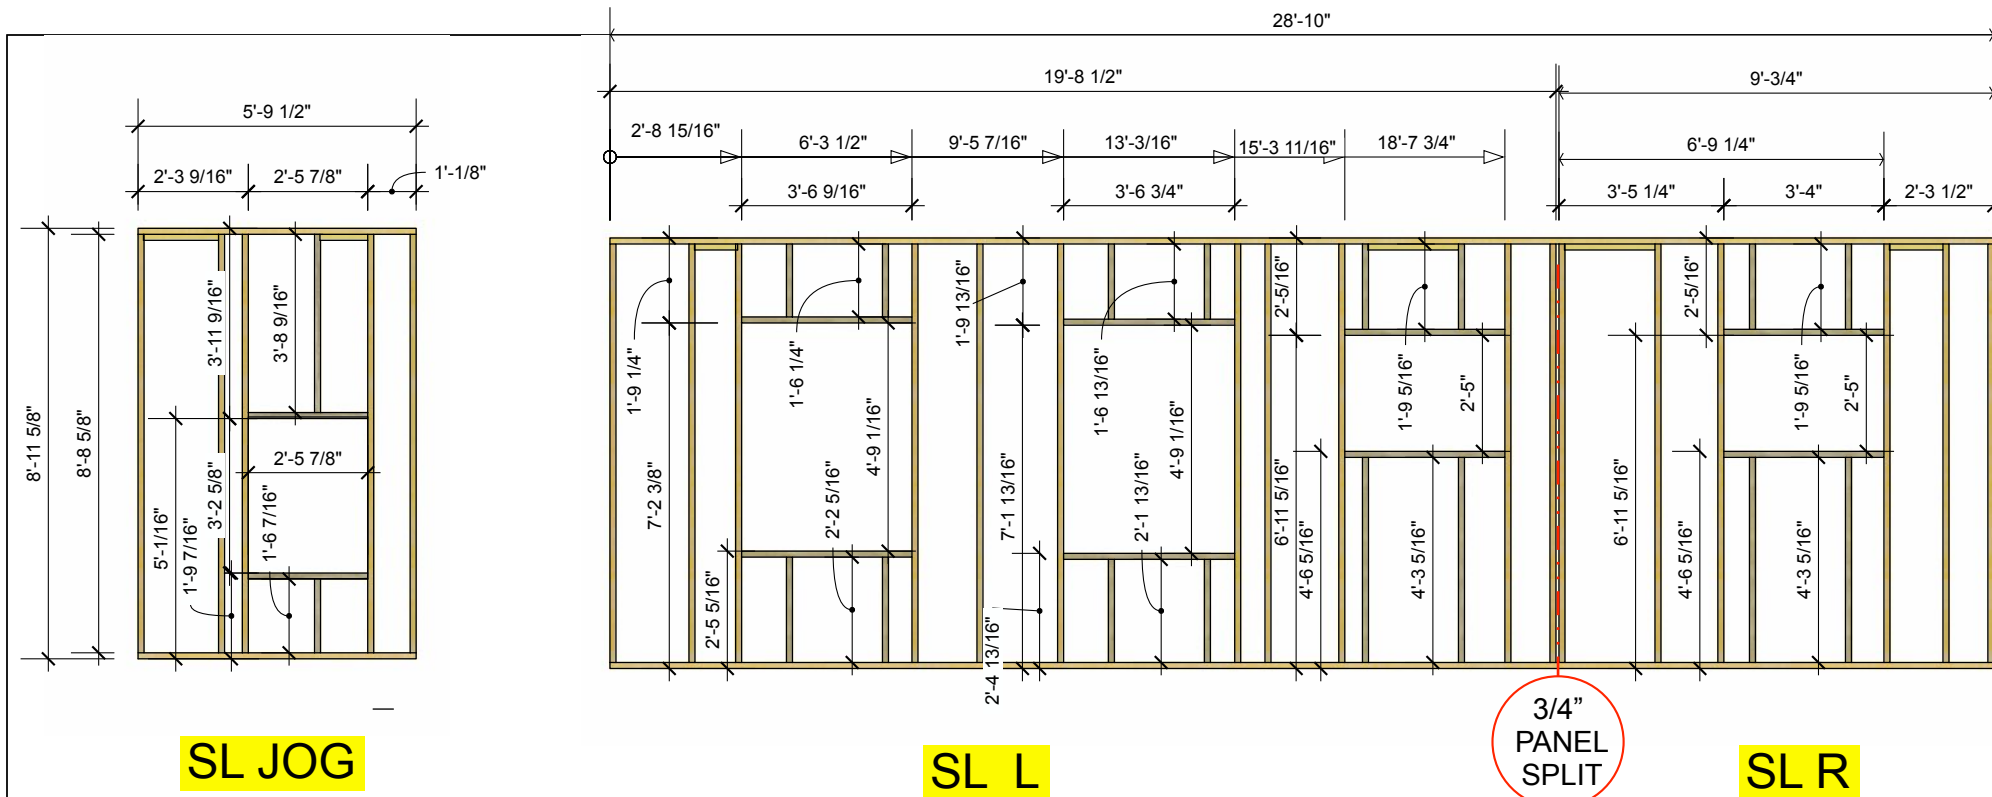

FRAME Scale: 1/4" = 1'-0"

- NOTES:
1. TOP AND BOTTOM PLATE OVER 14' TO BE LSL
 2. FRAMING LUMBER TO BE #1&2 SPF OR EQUIVALENT
 3. STUDS SPACED @ 24" O.C. UNLESS OTHERWISE NOTED

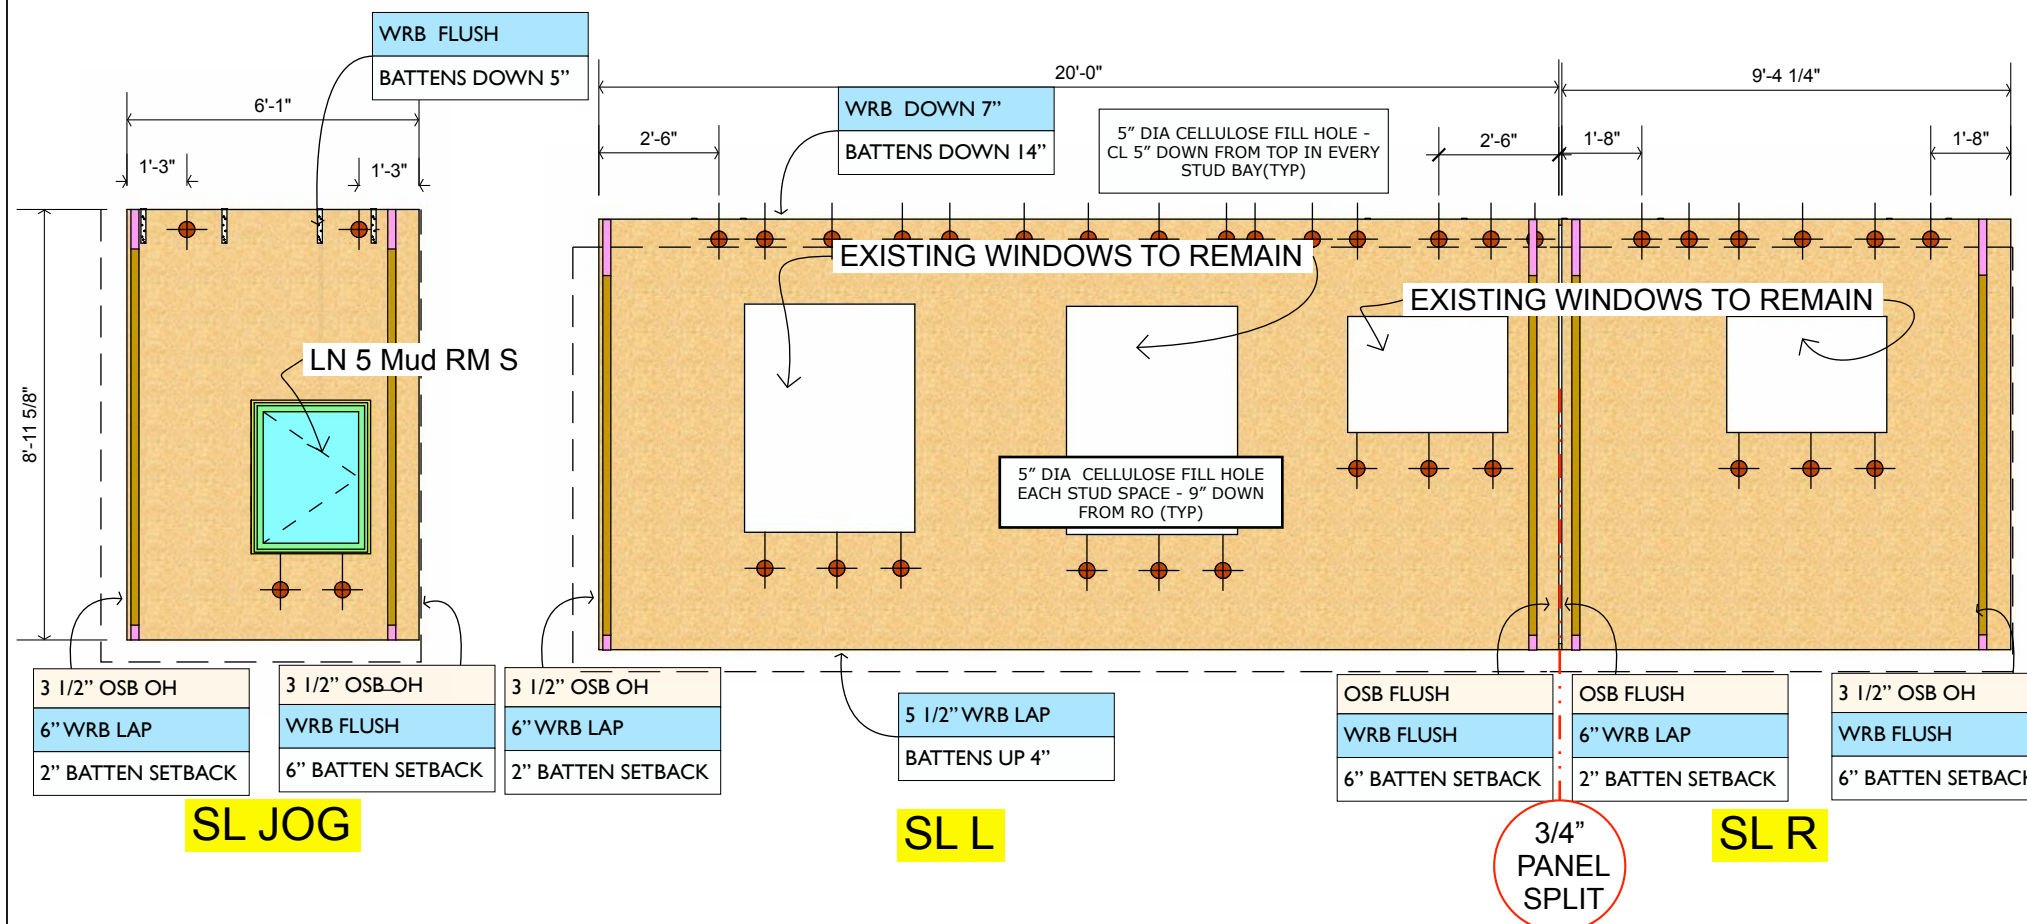

SHEATHING Scale: 1/4" = 1'-0"

- NOTES:
1. SHEATHING 7/16" OSB OR 1/2" SPRUCE PLYWOOD
 2. FLUSH SHEATHING ON ALL EDGES EXCEPT WHERE NOTED
 3. HORIZONTAL GAP BETWEEN SHEATHING SHEETS TO BE MIN 3/8" AND CAN BE UP TO 1 1/2"
 4. 5" DIA CELLULOSE FILL AND LIFT HOLES TO BE CENTRED 5" DOWN FROM TOP OF WALL AND 9" DOWN FROM RO SILL.

WRB AND RAINSCREEN BATTENS Scale: 1/4" = 1'-0"

- NOTES:
1. WRB TO BE SIGA MAJVEST SEALED PER 1.2 ON DETAIL SET
 2. BATTENS AS REQ'D FOR SIDING PER DETAIL SET
 3. DO NOT INSTALL BATTENS OVER LIFTING HOLES OR BLOWING HOLES
 4. DO NOT CUT WRB AT CELLULOSE FILL HOLES
 5. STAPLE WRB LAP ALLOWANCE TO EXPOSED BATTENS AFTER SIDING

SANDERCOCK HARMSMA PANEL DRAWINGS

DATE
June 3, 2022

FOR REVIEW

DRAWN BY
PA, TA

SOUTH WALL

BUTTERWICK CONSTRUCTION
& CARPENTRY LTD.
5628 82 Ave
Edmonton, AB T6B 3E6
Tel: 780.434.3559
www.butterwick.ca

SANDERCOCK/
HARMSMA
RETROFIT
11408 63 Street
Edmonton, AB
T5W 4G1



SANDERCOCK HARMSMA
PANEL DRAWINGS

DATE
June 3, 2022

FOR REVIEW


DRAWN BY
PA, TA

NORTH WALL

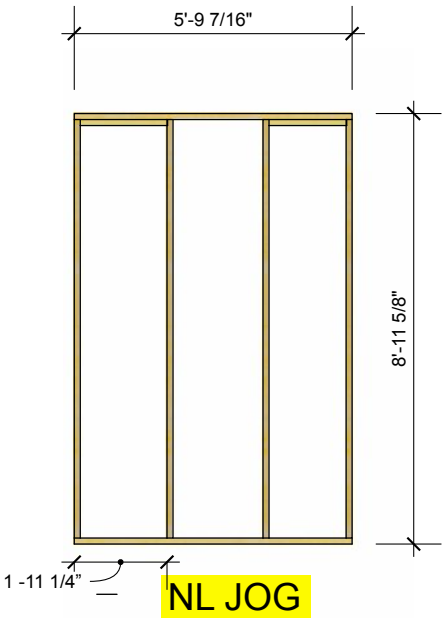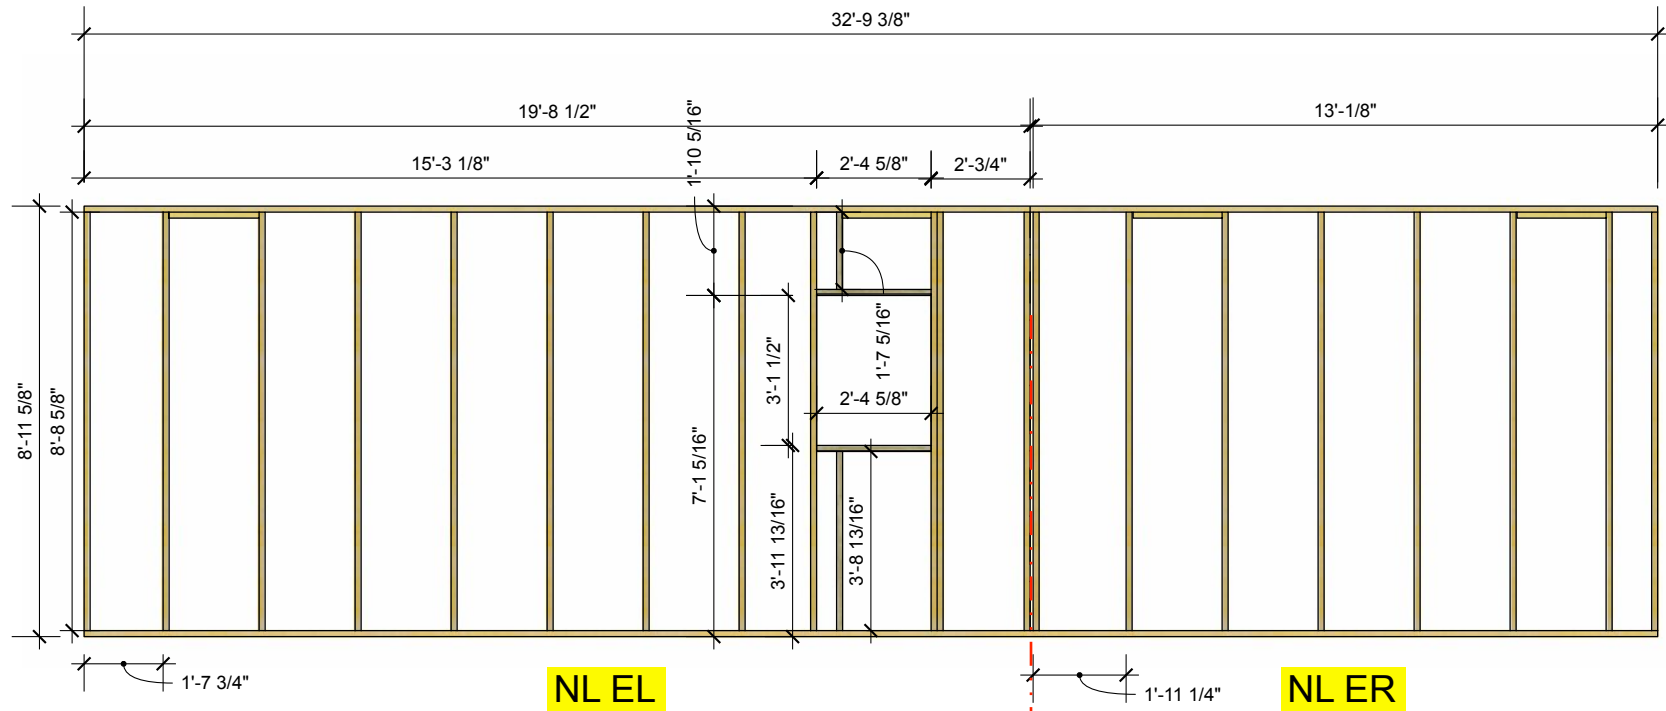


FRAME
Scale: 1/4" = 1'-0"

- NOTES:
1. TOP AND BOTTOM PLATES OVER 14' TO BE LSL LUMBER
 2. ALL OTHER FRAMING LUMBER TO BE #1&2 SPF OR EQUIVALENT
 3. STUDS SPACED @ 24" O.C. UNLESS OTHERWISE NOTED

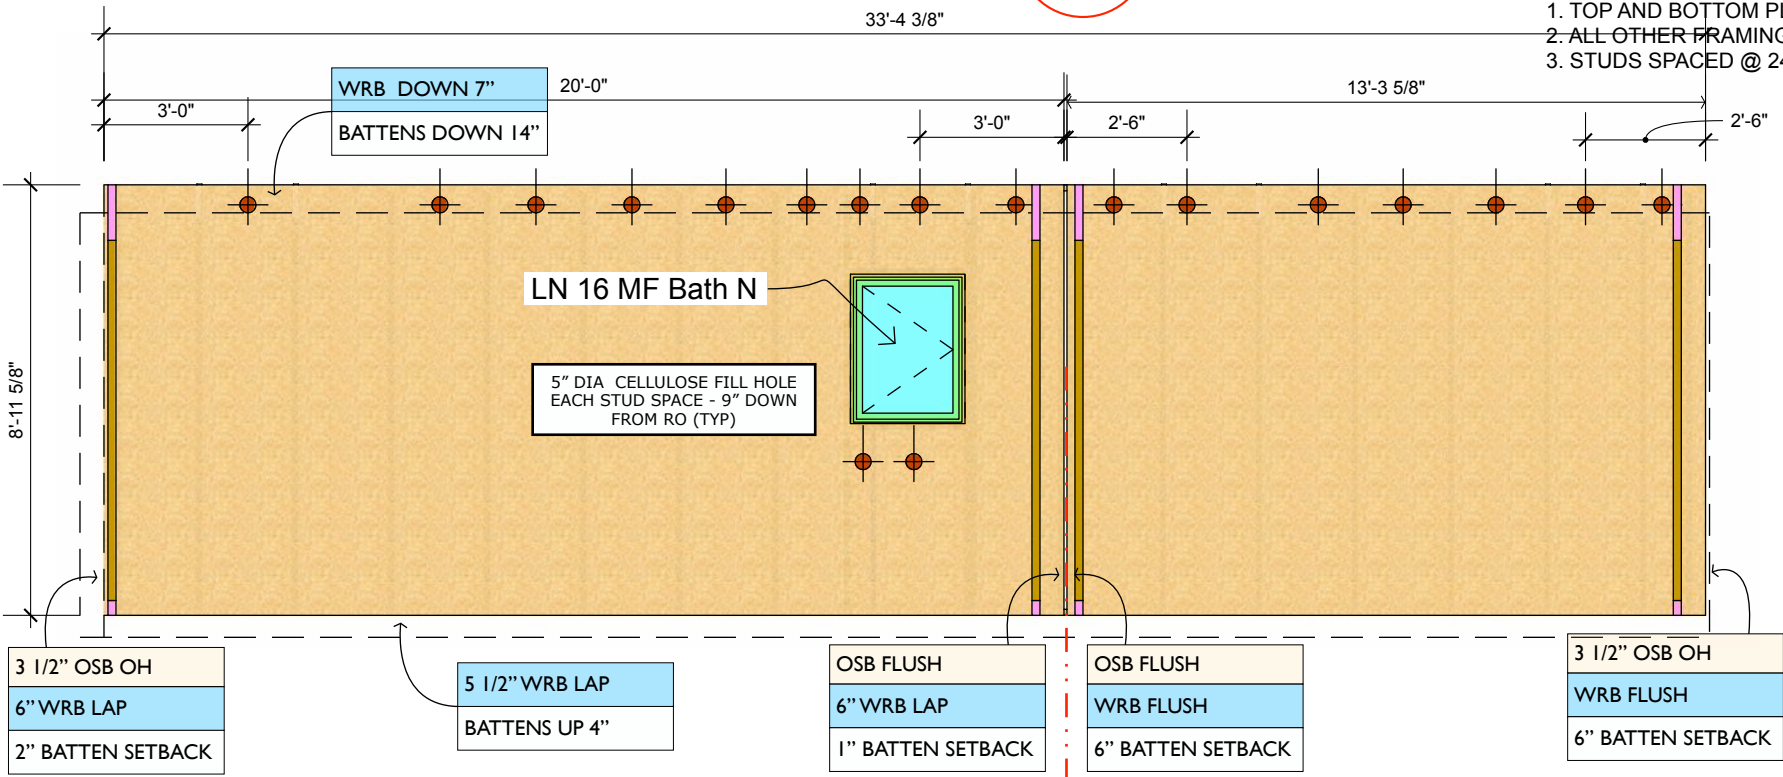

SHEATHING
Scale: 1/4" = 1'-0"

- NOTES:
1. SHEATHING 7/16" OSB OR 1/2" SPRUCE PLYWOOD
 2. FLUSH SHEATHING ON ALL EDGES
 3. HORIZONTAL GAP BETWEEN SHEATHING SHEETS TO BE MIN 3/8" AND CAN BE UP TO 1 1/2"

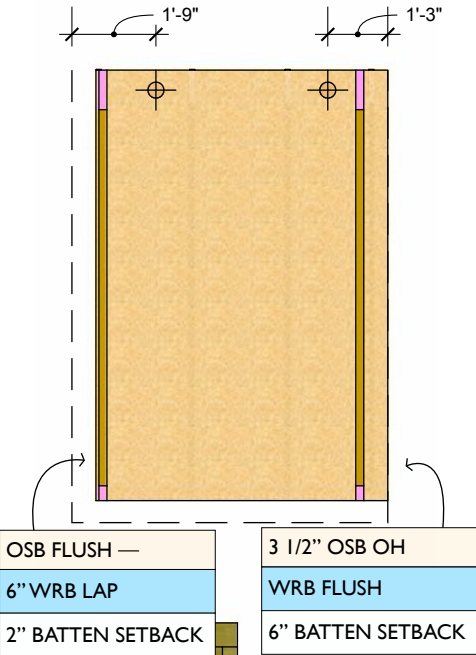

WRB AND RAINSCREEN BATTENS
Scale: 1/4" = 1'-0"

- NOTES:
1. WRB TO BE DELTA VENTS PLUS SEALED PER 1.2 ON DETAIL SET
 2. BATTENS AS REQ'D FOR SIDING PER DETAIL SET
 3. DO NOT INSTALL BATTENS OVER LIFTING HOLES OR BLOWING HOLES
 4. DO NOT CUT WRB AT CELLULOSE FILL HOLES
 5. STAPLE WRB LAP ALLOWANCE TO EXPOSED BATTENS AFTER SIDING

BUTTERWICK CONSTRUCTION
& CARPENTRY LTD.
5628 82 Ave
Edmonton, AB T6B 3E6
Tel: 780.434.3559
www.butterwick.ca

SANDERCOCK/
HARMSMA
RETROFIT
11408 63 Street
Edmonton, AB
T5W 4G1


SANDERCOCK HARMSMA
PANEL DRAWINGS


DATE
June 3, 2022

FOR REVIEW

DRAWN BY
PA, TA


SOUTH GABLE

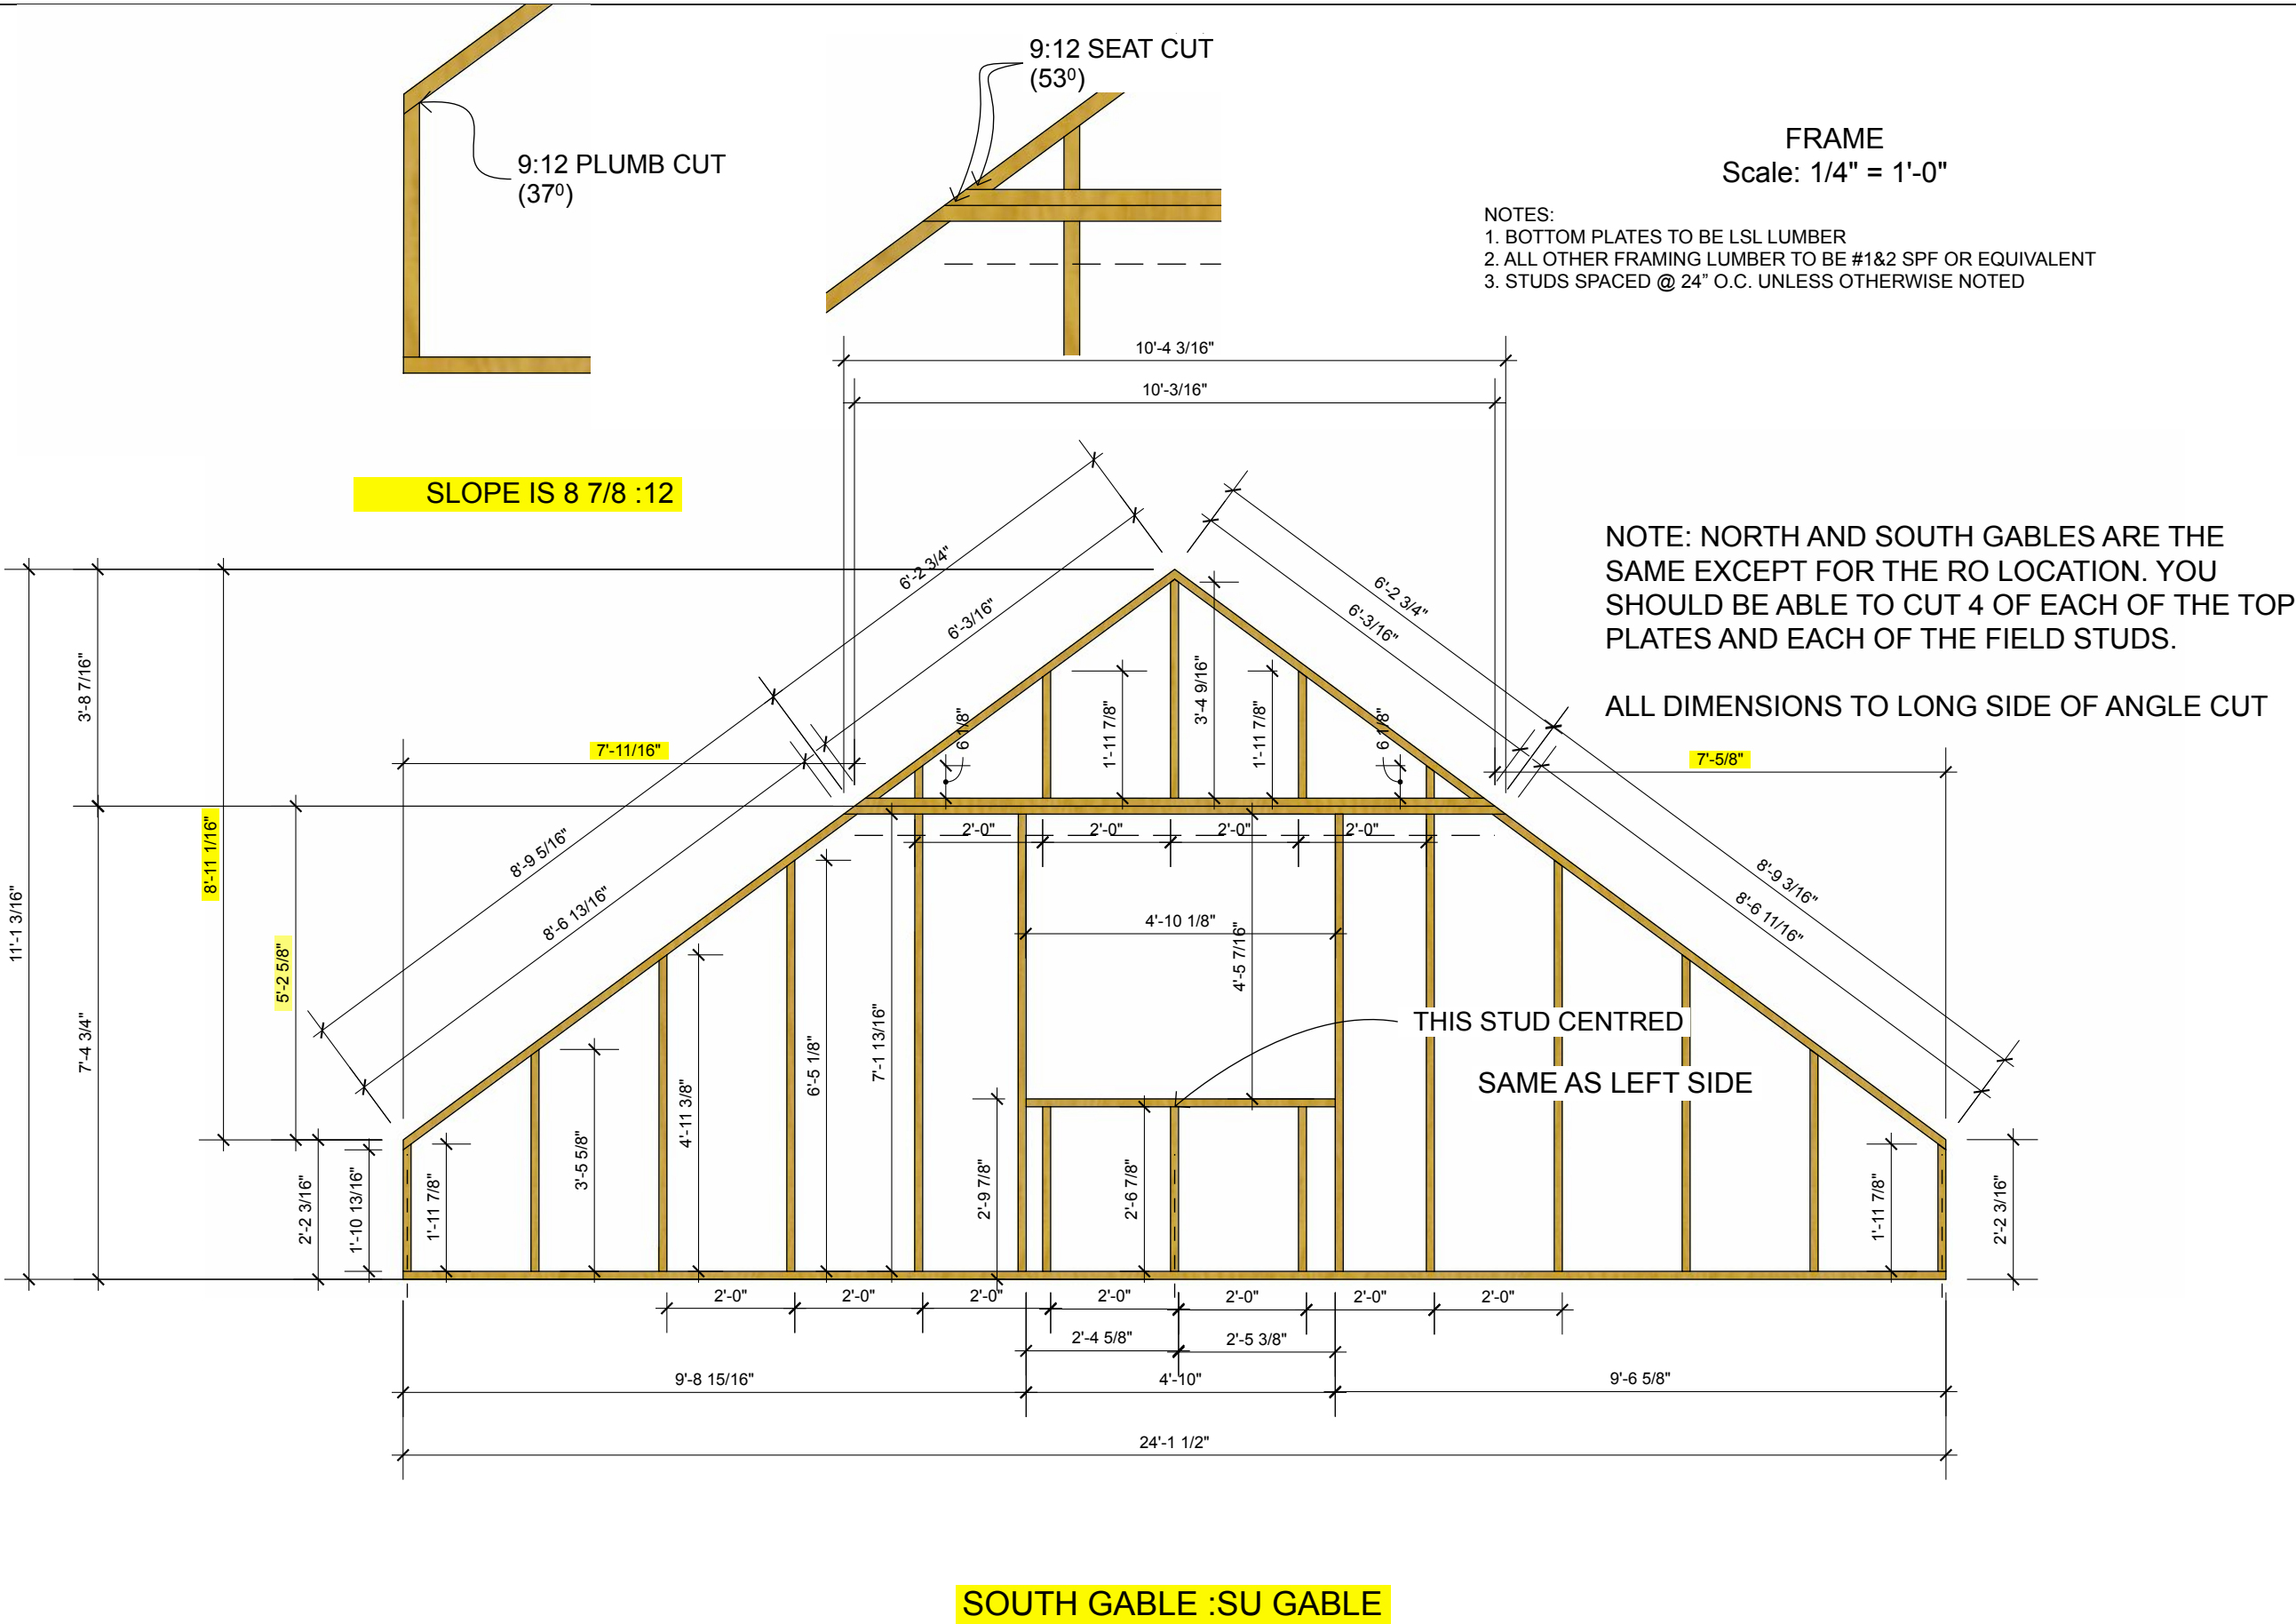

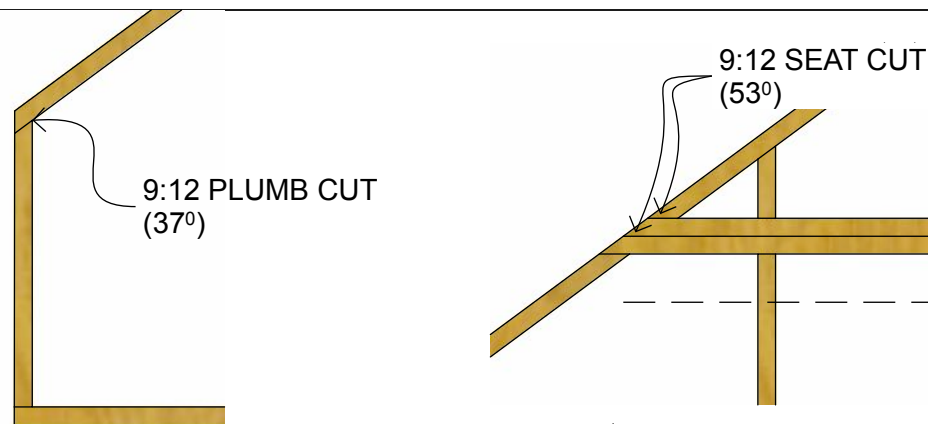

FRAME
Scale: 1/4" = 1'-0"

- NOTES:
1. BOTTOM PLATES TO BE LSL LUMBER
 2. ALL OTHER FRAMING LUMBER TO BE #1&2 SPF OR EQUIVALENT
 3. STUDS SPACED @ 24" O.C. UNLESS OTHERWISE NOTED

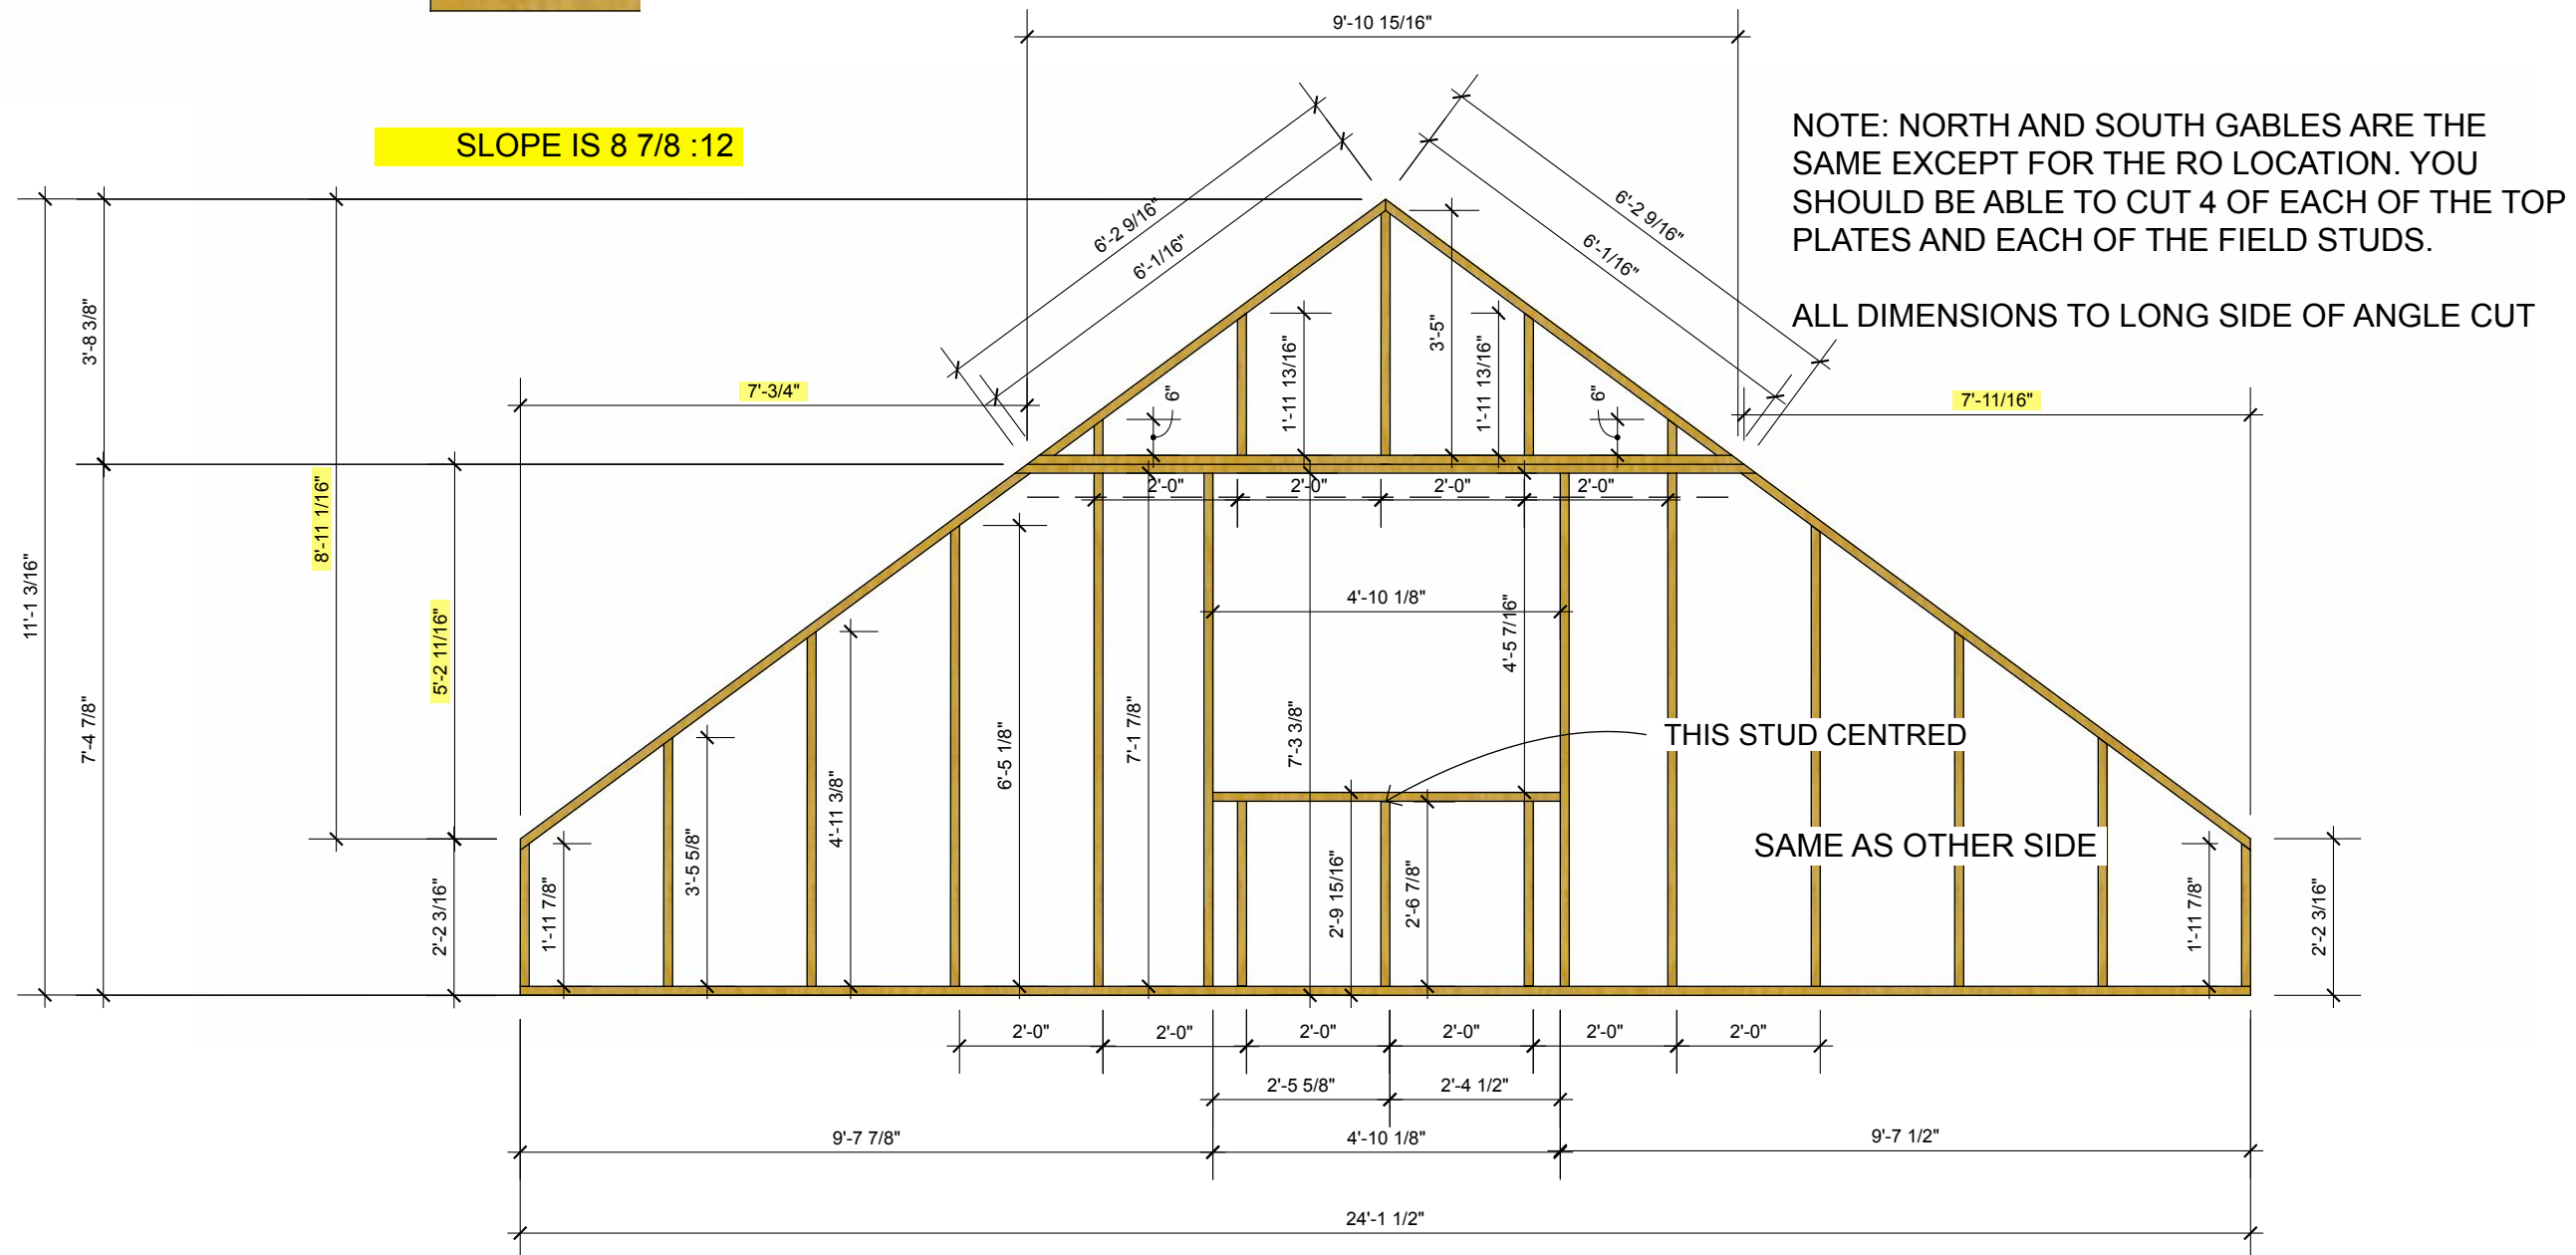

NORTH GABLE :NU GABLE

Butterwick DESIGN.
PLAN.
BUILD.

BUTTERWICK CONSTRUCTION
& CARPENTRY LTD.
5628 82 Ave
Edmonton, AB T6B 3E6
Tel: 780.434.3559
www.butterwick.ca

SANDERCOCK/
HARMSMA
RETROFIT
11408 63 Street
Edmonton, AB
T5W 4G1


SANDERCOCK HARMSMA
PANEL DRAWINGS

DATE
June 3, 2022


FOR REVIEW

DRAWN BY
PA, TA


NORTH GABLE

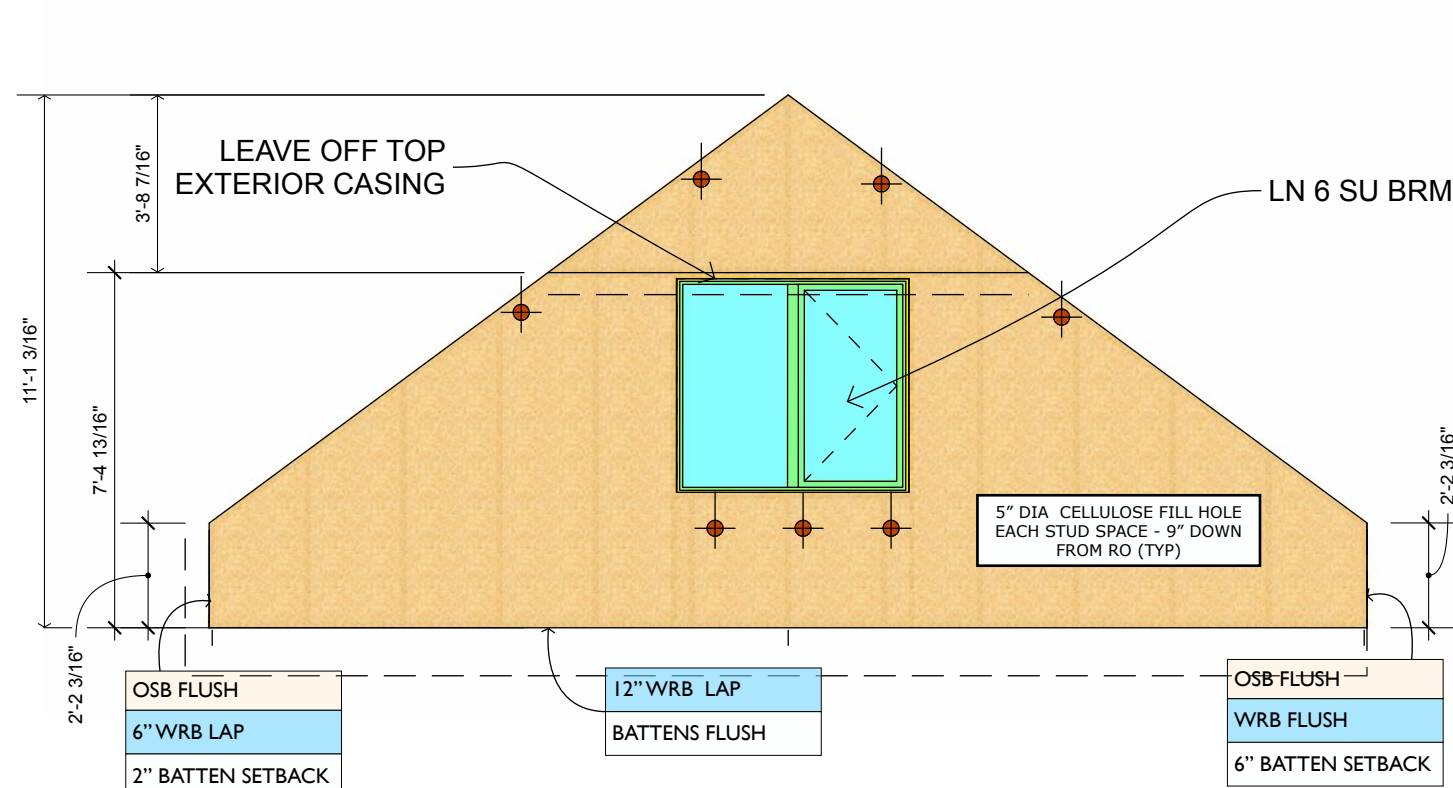

SOUTH GABLE :SU GABLE

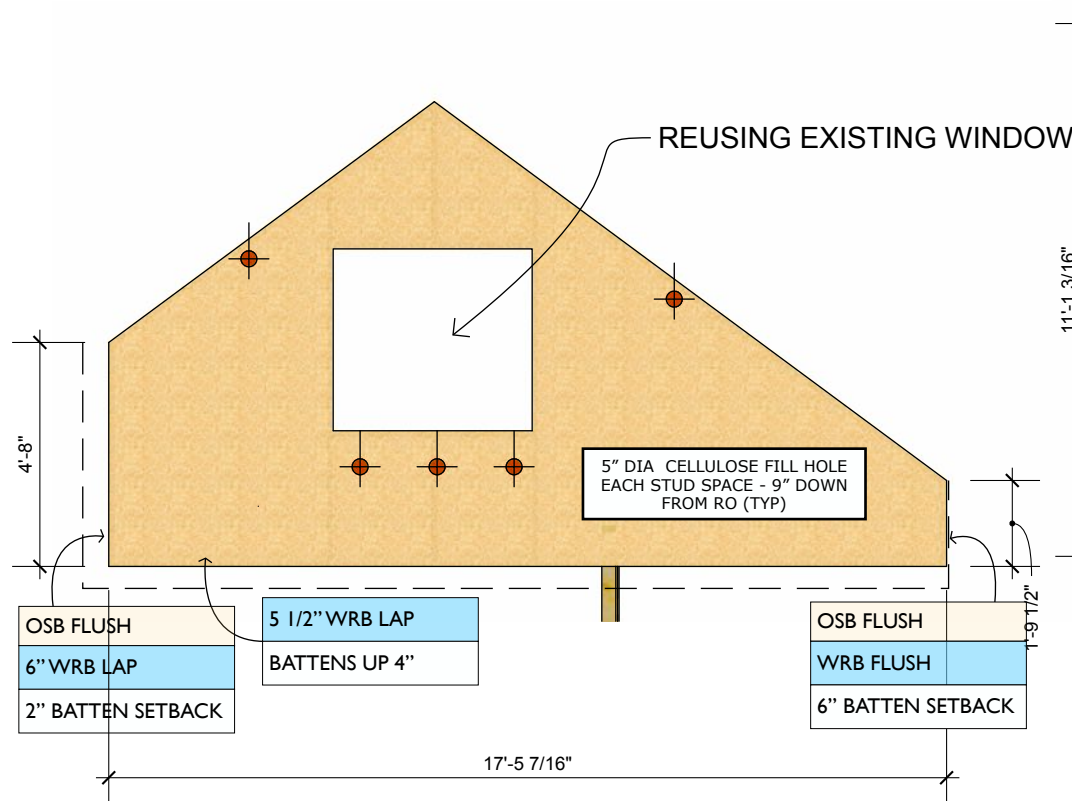

EAST GABLE :EU GABLE

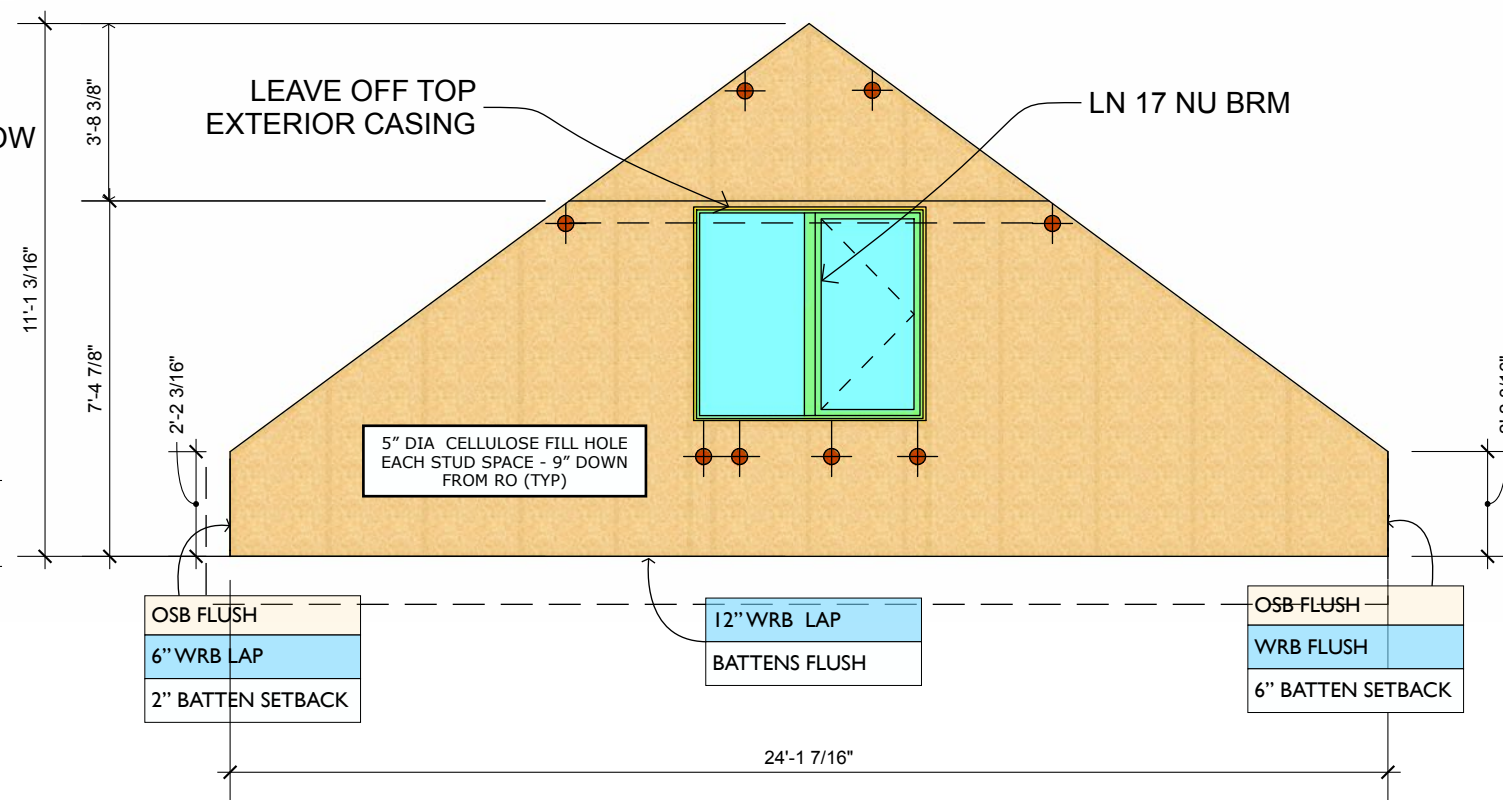

NORTH GABLE :NU GABLE

SHEATHING

Scale: 1/4" = 1'-0"

NOTES:

1. SHEATHING 7/16" OSB OR 1/2" SPRUCE PLYWOOD
2. FLUSH SHEATHING ON ALL EDGES
3. HORIZONTAL GAP BETWEEN SHEATHING SHEETS TO BE MIN 3/8" AND CAN BE UP TO 1 1/2"

WRB AND RAINSCREEN BATTENS

Scale: 1/4" = 1'-0"

NOTES:

1. WRB TO BE DELTA VENTS PLUS SEALED PER 1.2 ON DETAIL SET
2. BATTENS AS REQ'D FOR SIDING PER DETAIL SET
3. DO NOT INSTALL BATTENS OVER LIFTING HOLES OR BLOWING HOLES
4. DO NOT CUT WRB AT CELLULOSE FILL HOLES
5. STAPLE WRB LAP ALLOWANCE TO EXPOSED BATTENS AFTER SIDING

TAPE HEAD FLASHING TO WRB
FOR WATER PROOFING

2X3 BUILD OUT.
FASTENING METHOD OPEN
FOR DISCUSSION

TAPE WINDOW TO WRB

SPRAY FOAM SIDES AND TOP BEFORE
TAPING WINDOW TO WRB

TOP

NO FOAM AT THE BOTTOM

1/2" SHIMS

TAPE WINDOW TO PEAL AND STICK SILL.
ALLOW DRAINAGE TO FRONT UNDER WINDOW
(IN THE EVENT OF ANY WINDOW LEAKAGE)

DRIP EDGE TO
PROTECT TRIM

3/4" TRIM

RAIN SCREEN SPACER

SIGA WRB MEMBRANE

SILL

PEAL AND STICK OVER SILL
AND TURNED UP AT SIDES.
LAP AND SEAL OVER WRB

ON SITE OSB WALL TIE - TOP,
BOTTOM, OR ONE OF THE SIDE
FASTEN SECURELY TO EXISTING
WALL AND PANEL WINDOW BUCK

FINISHED JAMB EXTENSION

NOTE: SIDES SAME AS TOP BUT
W/O THE HEAD FLASHING

Butterwick DESIGN.
PLAN.
BUILD.

BUTTERWICK CONSTRUCTION
& CARPENTRY LTD.
5628 82 Ave
Edmonton, AB T6B 3E6
Tel: 780.434.3559
www.butterwick.ca

SANDERCOCK/
HARMSMA
RETROFIT
11408 63 Street
Edmonton, AB
T5W 4G1

SANDERCOCK HARMSMA
PANEL DRAWINGS

DATE
June 3, 2022

FOR REVIEW

DRAWN BY
PA, TA

KOLHTECH WINDOW INSTAL